


How to program a remote into your:  
**ET 500 or ET 500 PLUS**

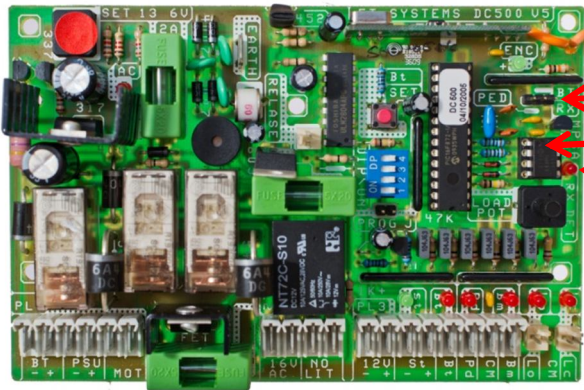

RX programming pins

Receiver IC

RX LED

**ET BLUE**




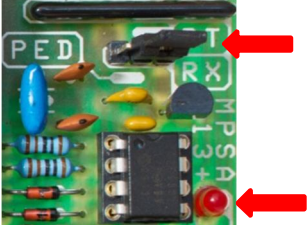
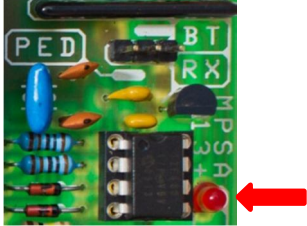
**Compatible with both the  
ET Blue and ET BLU MIX ranges of remotes**

(NB. The ET BLU MIX remote button must be set to the old ET Blue code for use on this motor if the receiver IC has no © logo on it.)

**ET BLU MIX**


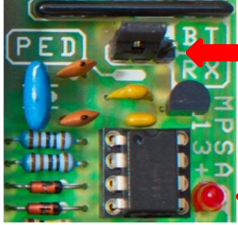
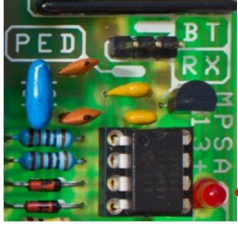


**Learning a remote transmitter button in the receiver for BT open/close operation: -**  
(25 user memory)

Action	Pictorial confirmation	Response
Press and hold the required remote transmitter button		RX LED flickers lightly.
Short circuit the middle RX programming pin to the BT pin. (Closest to the gate)		RX LED flashes Confirmation. 1 flash = First transmitter learnt. 2 flashes = Successful there is still memory available. Multiple rapid flashes = memory full.
Remove the short circuit once the RX LED flashes confirmation.		RX LED remains lit in standby.
Release remote transmitter button		

**How to program a remote into your:  
ET 500 or ET 500 PLUS**

**Learning a remote transmitter button in the receiver for the pedestrian operation: -  
(6 user memory)**

Action	Pictorial confirmation	Response
Press and hold the required remote transmitter button		RX LED flickers lightly.
Short circuit the middle RX programming pin to the PED pin. (Furthest from the gate)		RX LED flashes Confirmation. 1 flash = First transmitter learnt. 2 flashes = Successful there is still memory available. Multiple rapid flashes = memory full.
Remove the short circuit once the RX LED flashes confirmation.		RX LED remains lit in standby.
Release remote transmitter button		