 
 
# Quick start guide Era Mat T


#### 1 - Electrical connections




   
Cable	Colour	Connection
1	White-orange	Clockwise rotation pushbutton
2	White	TTBUS / Counter-clockwise rotation pushbutton
3	White-black	Common (for bus wires)
4	Brown	Supply phase
5	Blue	Neutral
6	Yellow-green	Earth

### - Memorisation of the FIRST transmitter













END


#### 3 - Adjust limit switches "0" and "1" in MANUAL mode

 


Step 03-04 - You can adjust whichever limit switch you want as the first limit switch. Repeat the procedure to memorise the other limit

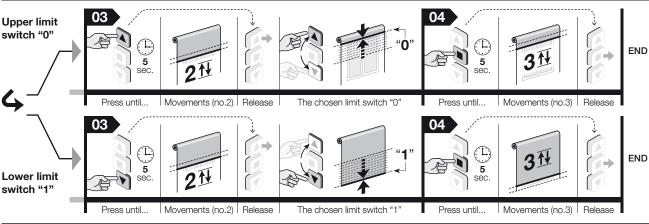

### Total deletion of memory

 


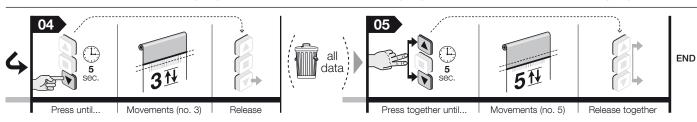


Note - When performing the procedures, at any time you can cancel it by keeping the ■ and ▼ keys pressed simultaneously for 4 seconds. Otherwise, do not press any key and wait 60 seconds for the motor to perform 6 movements.


IS0254A00EN\_22-03-2013 1/2

# 5 - "FTC" Function: tensioning the canvas when open awnings fitted with an automatic hooking and unhooking mechanism of the awning when opening (programming the "S" position)

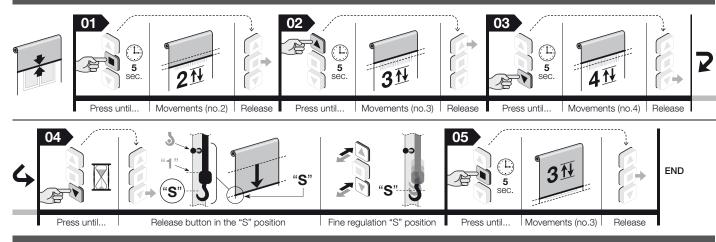


#### 6 - "RDC" Function: adjustment of the motor traction force when closing

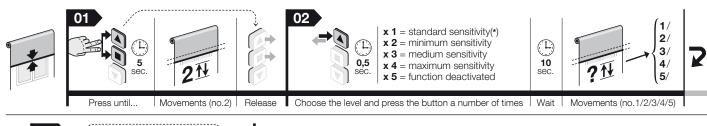

 

## 7 - Memorising a SECOND (third, fourth, etc.) transmitter in "Mode I"

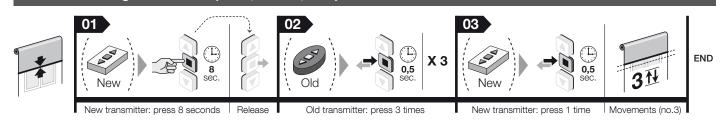

**Note** – When performing the procedures, at any time you can cancel it by keeping the ■ and ▼ keys pressed simultaneously for 4 seconds. Otherwise, do not press any key and wait 60 seconds for the motor to perform 6 movements.

IS0254A00EN\_22-03-2013 2/2