

Nice

CE

Temp-Control EU

External temperature measurement

ENG - Instructions and warnings for installation and use

Nice

1 WARNINGS AND GENERAL PRECAUTIONS

- **CAUTION! – This manual contains important instructions and warnings for personal safety.** Carefully read all parts of this manual. If in doubt, suspend installation immediately and contact Nice Technical Assistance.
- **CAUTION! – Important instructions: keep this manual in a safe place to enable future product maintenance and disposal procedures.**
- **CAUTION! – Any use other than that specified herein or in environmental conditions other than those stated in this manual is to be considered improper and is strictly forbidden!**
- The product's packaging materials must be disposed of in full compliance with local regulations.
- Never apply modifications to any part of the device. Operations other than those specified may only cause malfunctions. The manufacturer declines all liability for damage caused by makeshift modifications to the product.
- Do not expose this product to moisture, water or other liquids.
- This product is designed for indoor use only. Do not use outside!
- This product is not a toy. Keep away from children and animals! CR2032 coin cell battery is harmful if swallowed!

2 PRODUCT DESCRIPTION

NICE Temp Control-EU is a wireless temperature sensor designed to use with NICE Heat-Control (FGT-001 ZW5 EU). It allows for better temperature control by measuring reference temperature anywhere in the room.

Main features

- Temp-Control is the only compatible temperature sensor with NICE Heat-Control (FGT-001 ZW5 EU)
- Provide the best temperature regulation
- One Temperature Sensor can be paired with up to three thermostatic heads.

3 BASIC ACTIVATION OF THE DEVICE

NICE Temp Control-EU should be placed in the same room or heating zone as the thermostatic head which will use it as a reference point for the room temperature.

Before using, the sensor must be paired with the thermostatic head. One thermostatic head can be paired with only one sensor, but one sensor can be paired with up to three thermostatic heads.

3.1 - Pairing Temp-Control with NICE Heat-Control

To pair the Temp-Control with the device:

1. Use a coin to open the battery cover by turning it counter-clockwise.
2. Remove the sticker underneath the battery.
3. Put battery into slot and close cover.
4. Press and hold the button on the **thermostatic head**.
5. Release the button when you see blue LED color.
6. Click the button to confirm the selection, the LED ring will start blinking blue.
7. Within 1 minute click the button on the **Temp-Control** using the included key.
8. The LED ring on thermostatic head will glow green to confirm successful pairing.
9. Place the **Temp-Control** in same room as the **thermostatic head**, no further than 5 meters from it.

3.2 - Removing Temp-Control from NICE Heat-Control

To remove all paired heads from the sensor's memory:

1. Press and hold the button on the sensor for 2 seconds.
2. The LED on the sensor will blink 3 times to confirm unpairing.



Nice SpA
Oderzo TV Italia
info@niceforyou.com

www.niceforyou.com