

TX2WP-RC

Weatherproof, hardwired, enhanced rolling code transmitter.



Power supply:	4mA Standby, 35mA Transmitting @ 10 – 30v AC or DC.
Channels:	2
Frequency:	433.92MHz. ICASA: T/A – 2017/2117

Navigation of menu:

Press and release the **PRG Button** to advance through the menu options. The menu will loop back to option 1 on the fifth **PRG Button** press. To exit programming, wait 30sec or power cycle the transmitter.

Menu Options:

1. **Select transmission format for channel 1. (LED will flash once every 3sec)**
2. **Select transmission format for channel 2. (LED will flash twice every 3sec)**
3. **Select number of transmissions for channel 1. (LED will flash 3 times every 3sec)**
4. **Select number of transmissions for channel 2. (LED will flash 4 times every 3sec)**

ET Blu MIX® or ET BLUE © format:

1. **Press and release the PRG Button** once or twice to select the required channel on the **TX2WP-RC**.
2. While the **TX LED** blinks the **correct number of times, press and hold the PRG Button**.
3. When the **TX LED** flashes, release the **PRG Button**. (+/- 3sec)
 - **1 long flash = ET BLUE © format selected.**
 - **Rapid blinking = ET Blu MIX® format selected.**

Single transmission or triple transmission per trigger:

1. **Press and release the PRG Button** three or four times to select the required channel on the **TX2WP-RC**.
2. While the **TX LED** flashes the **correct number of times, press and hold the PRG Button**.
3. When the **TX LED** flashes, release the **PRG Button**. (+/- 3sec)
 - **1 long flash = 1 x transmit mode selected.**
 - **3 slow flashes = 3 x transmit mode selected.**

Five second transmissions:

For easier pairing of a **TX2WP-RC** to a compatible receiver, there is a facility whereby a channel can transmit for 5 seconds.

- Remove power.
- Install a wire link between **GND** and the required channel.
- Power up the transmitter with the link in place.
 - That channel will begin transmitting for 5sec after a 1sec delay.
- Remove the wire link after the channel is paired with it respective receiver.

Wiring diagram:

