

Programming table



Instructions translated from Italian

ISO459A01MM_30-03-2017

Nice S.p.A.
Via Pezza Alta, 13
31046 Oderzo (TV), Italy
info@niceforyou.com

Nice

LEVEL 1 PROGRAMMING

- 1 - VENETIAN POSITION PROGRAMMING
- 2 - INTERMEDIATE 1 POSITION PROGRAMMING
- 3 - VENETIAN POSITION PROGRAMMING WITH DISCHARGE
- 4 - QUICK PRESETS FOR PROGRAMMING CLIMATE SENSORS

	Level 1	Level 2	Level 3	Level 4	Level 5
ACCESS LEVEL 1 PROGRAMMING - This must be repeated at the start of each desired setting sequence	⇐ PRG Ⓞ 2				
1 - VENETIAN POSITION PROGRAMMING		▲ + ▼ (3s) Ⓞ 3			
The Venetian automatically moves to the LOW limit switch position (therefore wait for 1 second)			▼		
Move to the desired Venetian position				(▲ / ▼)	
Confirm (▲ - If the motor performs 6 movements, it means that the procedure was not performed successfully)					■ (3 sec) Ⓞ 4
2 - INTERMEDIATE 1 POSITION PROGRAMMING		▲ + ■ (3s) Ⓞ 4			
The Venetian automatically moves to the HIGH limit switch position (therefore wait for 1 second)			▲		
Move to the desired intermediate position				(▲ / ▼)	
Confirm (▲ - If the motor performs 6 movements, it means that the procedure was not performed successfully)					■ (3 sec) Ⓞ 4
3 - VENETIAN POSITION PROGRAMMING WITH DISCHARGE		■ (3 sec) Ⓞ 2			
Select the desired option and programme it:					
• Discharge activation (small level: 0.1s)			▲ (3 sec) Ⓞ 3		
• Discharge activation (medium level: 0.3s)			■ (3 sec) Ⓞ 3		
• Discharge activation (large level: 0.6s)			▼ (3 sec) Ⓞ 3		
• Discharge deactivation (*)			▲ + ▼ (3s) Ⓞ 4		
4 - QUICK PRESETS FOR PROGRAMMING CLIMATE SENSORS		▲ (3 sec) Ⓞ 5			
Choose the option; namely, the name of application connected to the climate sensors. Refer to the TT1VR manual for the presets linked to each option:					
• Shutter			▲ (3 sec) Ⓞ 2		
• Venetian (*)			■ (3 sec) Ⓞ 3		
• Outdoor awning			▼ (3 sec) Ⓞ 4		

LEVEL 2 PROGRAMMING

- 1 - INTERMEDIATE POSITION 2 / 3 / ... (up to 30) PROGRAMMING, with reference to the limit switch HIGH
 - 2 - INTERMEDIATE POSITION 2 / 3 / ... (up to 30) PROGRAMMING, with reference to the limit switch LOW
 - 3 - DEGREE OF TILT PROGRAMMING (Ergonomic Tilting)
 - 4 - DIRECTION OF MOTOR MOVEMENT PROGRAMMING
- Programming of climate sensors:
- 5 - DIRECTION OF MOVEMENT WHEN IT RAINS
 - 6 - DIRECTION OF MOVEMENT WHEN IT IS WINDY
 - 7 - "WIND SECURITY" PROGRAMMING (blocking of commands sent by the user)
 - 8 - DIRECTION OF MOVEMENT IN BRIGHT SUN
 - 9 - DIRECTION OF MOVEMENT WHEN OVERCAST

	Level 1	Level 2	Level 3	Level 4	Level 5
ACCESS LEVEL 2 PROGRAMMING - This must be repeated at the start of each desired setting sequence	⇐ PRG Ⓞ 2	⇐ PRG Ⓞ 2			
1 - INTERMEDIATE POSITION 2 / 3 / ... (up to 30) PROGRAMMING, with reference to the limit switch HIGH			▲ + ■ (3s) Ⓞ 2		
The Venetian automatically moves to the HIGH limit switch position; wait for 1 second following completion			▲		
Move the Venetian (with "man present") to the desired intermediate position				(▲ / ▼)	
Select the desired option:					
• Confirm					■ (3 sec) Ⓞ 3
• Confirm with another transmitter					T? (5 sec.) Ⓞ 4
2 - INTERMEDIATE POSITION 2 / 3 / ... (up to 30) PROGRAMMING, with reference to the limit switch LOW			■ + ▼ (3s) Ⓞ 2		
The Venetian automatically moves to the LOW limit switch position; wait for 1 second following completion			▼		
Move the Venetian (with "man present") to the desired intermediate position				(▲ / ▼)	
Select the desired option:					
• Confirm					■ (3 sec) Ⓞ 3
• Confirm with another transmitter					T? (5 sec.) Ⓞ 4
3 - DEGREE OF TILT PROGRAMMING (Ergonomic Tilting)			■ (3 sec) Ⓞ 3		
Select the desired option and programme it:					
• Small Tilting (0.1s) (*)				▲ (3 sec) Ⓞ 3	
• Medium Tilting (0.3 sec)				■ (3 sec) Ⓞ 3	
• Large Tilting (0.6s)				▼ (3 sec) Ⓞ 3	
• Extra Large Tilting (1s)				▲ + ▼ (3s) Ⓞ 3	
4 - DIRECTION OF MOTOR MOVEMENT PROGRAMMING			▲ + ▼ (3s) Ⓞ 3		
Press a key and verify a movement has been performed in the same direction indicated by the arrow on the key.				▲ / ▼	
If the association is not correct, choose and program the desired option:					

• Standard direction					▲ (3 sec) Ⓞ 3
• Inverse direction					▼ (3 sec) Ⓞ 3
PROGRAMMING OF CLIMATE SENSORS - This must be repeated at the start of each desired setting sequence	⇐ PRG Ⓞ 2	⇐ PRG Ⓞ 2	▼ (3 sec.) Ⓞ 3		
5 - DIRECTION OF MOVEMENT WHEN IT RAINS					■ (3 sec) Ⓞ 2
Press and hold the following button					
Select the desired option and programme it:					
• Upward movement (*)					▲ (3 sec) Ⓞ 2
• The application does not move					■ (3 sec) Ⓞ 3
• Downward movement					▼ (3 sec) Ⓞ 3
6 - DIRECTION OF MOVEMENT WHEN IT IS WINDY					▲ + ■ (3s) Ⓞ 3
Press and hold the following two buttons					
Select the desired option and programme it:					
• Upward movement (*)					▲ (3 sec) Ⓞ 2
• The application does not move					■ (3 sec) Ⓞ 3
• Downward movement					▼ (3 sec) Ⓞ 4
7 - "WIND SECURITY" PROGRAMMING (blocking of commands sent by the user)					■ + ▼ (3s) Ⓞ 5
Press and hold the following two buttons					
Select the desired option and programme it:					
• Enable blocking of command transmission					▲ (3 sec) Ⓞ 2
• Disable blocking of command transmission (*)					▼ (3 sec) Ⓞ 4
8 - DIRECTION OF MOVEMENT IN BRIGHT SUN					▼ (3 sec) Ⓞ 4
Press and hold the following button					
Select the desired option and programme it:					
• Go to intermediate 1 position					▲ (3 sec) Ⓞ 3
• Downward movement					■ (3 sec) Ⓞ 3
• Go to Venetian position (*)					▼ (3 sec) Ⓞ 3
9 - DIRECTION OF MOVEMENT WHEN OVERCAST					▲ (3 sec) Ⓞ 4
Press and hold the following button					
Select the desired option and programme it:					
• Go to intermediate 1 position					▲ (3 sec) Ⓞ 3
• Upward movement (*)					■ (3 sec) Ⓞ 3
• Go to Venetian position					▼ (3 sec) Ⓞ 3
• The application does not move					▲ + ▼ (3s) Ⓞ 3

LEVEL 3 PROGRAMMING

- 1 - ENABLE/DISABLE TILT
- 2 - BLOCKING OF TRANSMITTER MEMORISATION

	Level 1	Level 2	Level 3	Level 4	Level 5
ACCESS LEVEL 3 PROGRAMMING - This must be repeated at the start of each desired setting sequence	⇐ PRG Ⓞ 2	⇐ PRG Ⓞ 2	⇐ PRG Ⓞ 3		
1 - ENABLE/DISABLE TILT					▲ (3 sec) Ⓞ 3
Select the desired option and programme it:					
• Tilting enabled (*)					▲ (3 sec) Ⓞ 2
• Tilting disabled (the mechanical motor functions are active)					▼ (3 sec) Ⓞ 4
2 - BLOCKING OF TRANSMITTER MEMORISATION					▲ + ▼ (3s) Ⓞ 4
Select the desired option and programme it:					
• BLOCK memorisation of the transmitters					▲ (3 sec) Ⓞ 3
• UNBLOCK memorisation of the transmitters					▼ (3 sec) Ⓞ 5

LEVEL 4 PROGRAMMING

- 1 - DELETION OF THE INDIVIDUAL MEMORISED TRANSMITTER
- 2 - DELETION OF ALL MEMORISED TRANSMITTERS
- 3 - DELETION OF ALL SETTINGS, EXCLUDING MEMORISED TRANSMITTERS, AND RESTORATION OF THE FACTORY SETTINGS

	Level 1	Level 2	Level 3	Level 4	Level 5
ACCESS LEVEL 4 PROGRAMMING - This must be repeated at the start of each desired setting sequence	⇐ PRG Ⓞ 2	⇐ PRG Ⓞ 2	⇐ PRG Ⓞ 3	⇐ PRG Ⓞ 4	
1 - DELETION OF THE INDIVIDUAL MEMORISED TRANSMITTER					▲ (3 sec.) Ⓞ 4 (**)
2 - DELETION OF ALL MEMORISED TRANSMITTERS					■ (3 sec) Ⓞ 5
3 - DELETION OF ALL SETTINGS, EXCLUDING MEMORISED TRANSMITTERS, AND RESTORATION OF THE FACTORY SETTINGS					▲ + ▼ (3s) Ⓞ 5 (***)

LEVEL 5 PROGRAMMING

- 1 - FULL DELETION OF THE MEMORY, INCLUDING MEMORISED TRANSMITTERS, AND RESTORATION OF THE FACTORY SETTINGS

	Level 1	Level 2	Level 3	Level 4	Level 5
ACCESS LEVEL 5 PROGRAMMING - This must be repeated at the start of each desired setting sequence	⇐ PRG Ⓞ 2	⇐ PRG Ⓞ 2	⇐ PRG Ⓞ 3	⇐ PRG Ⓞ 4	⇐ PRG Ⓞ 5
- The operation deletes ALL PROGRAMMED SETTINGS and restores the factory settings					

(*) - Factory setting.

(**) - At the end, press a button for 5 seconds: **option A** - to delete a transmitter memorised in Mode I press **any button**; **option B** - to delete a transmitter memorised in Mode II, press the button **to be deleted** (provided it is memorised).

(***) - At the end, turn off the power and restore power.