

Nice

CE

BiDi-Shutter

Interior bidirectional interface for tubular motor

EN - Instructions and warnings for installation and use

1 WARNINGS AND GENERAL PRECAUTIONS

- **⚠ CAUTION!** – This manual contains important instructions and warnings for personal safety. Carefully read all parts of this manual. If in doubt, suspend installation immediately and contact the Nice Technical Assistance.
- **⚠ CAUTION!** – Important instructions: keep this manual in a safe place to enable future product maintenance and disposal procedures.
- **⚠ CAUTION!** – All installation and connection operations must be performed exclusively by suitably qualified and skilled personnel with the unit disconnected from the mains power supply.
- **⚠ CAUTION!** – Any use other than that specified herein or in environmental conditions other than those stated in this manual is to be considered improper and is strictly forbidden!
- This product can only be used indoors or protected from weather conditions by a control unit housing.
- The products packaging materials must be disposed of in full compliance with local regulations.
- Don't open the device protection housing as it contains non-serviceable electrical circuits.
- Never modify any parts of the device. Operations other than those specified can only cause malfunctions. The manufacturer declines all liability for damage caused by makeshift modifications to the product.
- Never place the device near the sources of heat and never expose it to naked flames. These actions can damage the product and cause malfunctions.
- This product isn't intended for use by people with reduced physical, sensory or mental capabilities (including children) or who lack experience and knowledge, unless they have been supervised or instructed to use the product by a person responsible for their safety.
- Make sure that children don't play with the product.
- Check the warnings in the instruction manual for the motor that the product is connected to.
- Handle the product with care, don't crush, knock or drop it to avoid damage.

2 PRODUCT DESCRIPTION

The BiDi-Shutter control unit enables the control of a mains-powered, single-phase asynchronous motor, with connection types: Down, Common, Up, used for the automation of awnings, rolling shutters, Venetian blinds and similar.

The BiDi-Shutter control unit incorporates a radio transceiver operating at the frequency of 433.92 MHz with rolling code technology to guarantee optimal safety levels.

Each control unit can memorise up to 30 mono or bidirectional transmitters in the series ERA, ERGO, FLOR, NICEWAY and VERY, enabling the remote control of the unit.

The control unit has two inputs for controlling the unit with external pushbuttons.

Memorisation and programming can be done using the programming pushbutton (Figure 1) on the BiDi-Shutter.

The user is guided through the various phases with LED signals.

The control unit has overload and overheating protection, which disables the relays and prevents damage to the circuit.

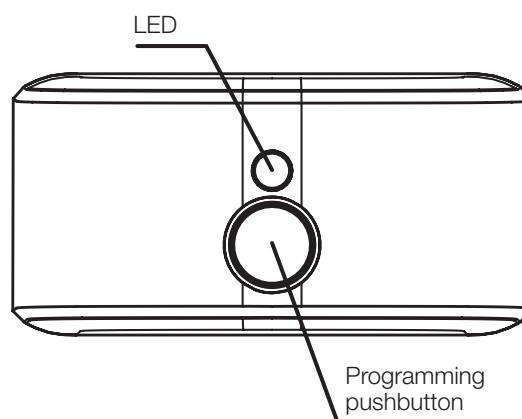


Figure 1: Localization of the programming button

3 TECHNICAL SPECIFICATIONS

BiDi-Shutter is produced by Nice S.p.A. (TV).

Warning

All technical specifications stated in this section refer to an ambient temperature of 20 °C (± 5 °C). Nice S.p.A. reserves the right to modify the product when necessary, while maintaining the same functionalities and intended use.

Table A1 - BiDi-Shutter - Specifications	
Type	in-wall/flush box mounted control unit for tubular motors
Power supply	100–240 V AC, 50/60 Hz
Motor rated current	2 A
Motor rated power	480 VA for Vn = 240 V; 460 VA for Vn = 230 V; 240 VA for Vn = 120 V; 200 VA for Vn = 100 V
Required circuit breaker	Compliant with IEC/EN 60898-1; Curve code: B; Rated current: up to 16 A; Breaking capacity: 6 kA; Rated insulation voltage: 500 V; Rated impulse withstand voltage: 4 kV;
Casing protection rating	IP 20
Operating temperature	0–35 °C
Dimensions (mm)	45 x 36 x h 23
Weight	20 g

Table A2 - BiDi-Shutter - Radio transceiver	
Frequency band	433.05–434.04 MHz
Code	OPERA/FLOR (rolling code), PLN2+ (rolling code)
No. of memorisable transmitters	30, including climatic sensors
Transceiver range	Estimated at 150 m in open space and 20 m inside buildings (*)
Max. transmit power	10 dBm

(*) The transceiver range is strongly influenced by other devices operating at the same frequency with continuous transmission, such as alarms and radio headphones which interfere with the control unit transceiver.

4 INSTALLATION



- The product is subject to hazardous electric voltages.
- The installation of the BiDi-Shutter and automations must be performed exclusively by technically qualified personnel, in observance of current legislation and standards, and according to these instructions. All connections must be made with the system disconnected from the power supply
- The BiDi-Shutter control unit was designed for insertion in a junction box or wall box; its housing doesn't have any protection against water and only has basic protection against contact with solid parts. Never place the BiDi-Shutter in inadequately protected environments.
- Never open or perforate the BiDi-Shutter housing. These actions are subject to hazardous electric voltages.

4.1 - Preliminary checks

- The power supply line must be protected by suitable (compliant with IEC/EN 60898-1 standard, rated up to 16A) magneto-thermal and residual-current circuit breakers.
- A disconnection device must be inserted in the power supply line of the electrical mains or equivalent system, for example an outlet and relative plug. The distance between the contacts must be at least 3 mm with an overvoltage category of III. If the disconnection device for the power supply isn't mounted near the automation, it must have a locking system to prevent unintentional, unauthorized connection.

4.2 - Electrical connections

CAUTION! – Risk of electric shock!

Carefully follow all the connection instructions.

If you have any questions, concerns or need additional product knowledge, visit the website: www.niceforyou.com, where you can find all the current technical data.

Incorrect connection can be dangerous and cause damage to the system.

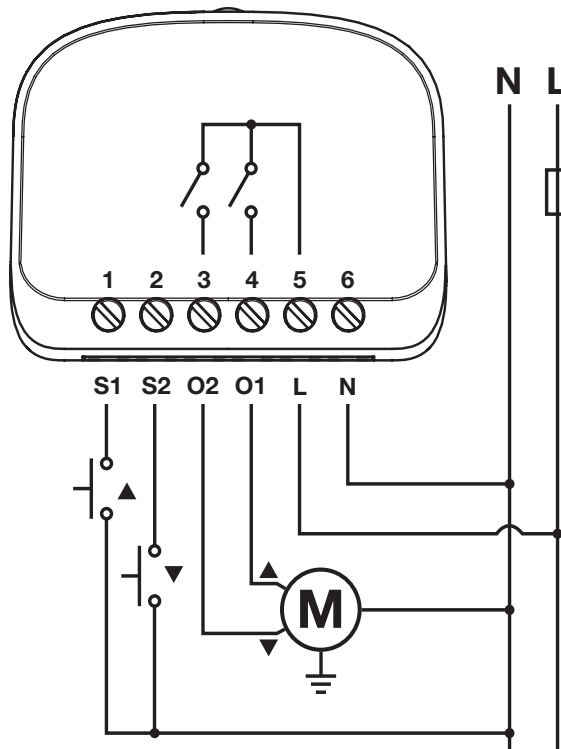


Figure 2: Wiring diagram of the BiDi-Shutter

4.3 - Motor connection

The single phase asynchronous motor must be connected to the mains through terminals O1-N-O2 (Up, Common, Down). Up corresponds to the key ▲ of the transmitters and S1 pushbutton, Down to key ▼ and S2 pushbutton. After connecting, if the direction of motor rotation is incorrect, exchange the connections of terminals O1 and O2.

CAUTION! – Never connect more than one motor per control unit!

4.4 - Power supply

The electric power supply of the control unit must be connected through terminals L and N (Live, Neutral). The BiDi-Shutter control unit can operate with supply voltage of 100 to 240 V and frequency of 50 or 60 Hz.

4.5 - Pushbuttons

If required, external, momentary pushbuttons can be connected to terminals S1 and S2, which can control the unit directly. The pushbuttons are connected between neutral (N) and terminals S1 and S2 as shown in Figure 2. The pushbutton connected to S1 is responsible for Up movement, and the pushbutton connected to S2 is responsible for Down movement.

CAUTION! The pushbuttons carry mains voltage and must therefore be protected and insulated adequately.

5 MEMORISING TRANSMITTERS

This chapter describes the memorisation procedures in Mode I, used to control a single automation with 3 keys of transmitters, and Mode II, used to control an automation with a single key, thus leaving other keys free to control other automations.

- The **■** key corresponds to the central key of the ERGO, PLANO and NICEWAY transmitters.
- All memorisation sequences are timed. They need to be completed within the set time limits.
- With transmitters that envisage several “groups”, the relative group to associate with the control unit needs to be selected before proceeding.
- Settings with a radio are possible on all receivers located within the operating radius of the transmitter, and therefore only the device required for the operation should remain powered.

5.1 - Mode I

In Mode I the command associated with the transmitter keys is fixed (Table A3). In Mode I only one memorisation phase is performed for each transmitter and only one memory location is occupied. During memorisation in Mode I it's not important which key is pressed on the transmitter.

Table A3 - BiDi-Shutter - Memorisation using Mode I

Key	Command
The ▲ key or the 1 st channel	Up
The ■ key or the 2 nd channel	Stop
The ▼ key or the 3 rd channel	Down

5.2 - Memorising transmitters in Mode I

When there is no transmitter memorised, the first one can be memorised during a startup phase according to the following procedure.

Table A4 - BiDi-Shutter - Memorising first transmitter during startup in Mode I

N°	Description	Example
1.	Connect the control unit to the power mains, which is confirmed by 2 red LED flashes.	
2.	Within 10 seconds: <ul style="list-style-type: none"> • Monodirectional transmitters: press and hold any key of the transmitter for at least 3 seconds to be memorized. • Bidirectional transmitters: press any key of the transmitter to be memorized. 	MONO: BIDI:
3.	If the memorisation procedure is successful, the LED emits 3 red flashes.	

If no transmitters are memorized during a startup phase, the programming procedure ends automatically after 10 seconds and the LED emits one long red flash.

The transmitters can be memorised using the programming pushbutton according to the following procedure.

Table A5 - BiDi-Shutter - Memorising first and other transmitters in Mode I

N°	Description	Example
1.	Press and hold the programming pushbutton (Figure 1).	
2.	Release the programming pushbutton (Figure 1) when the LED glows with red (1 st position).	
3.	Within 10 seconds: <ul style="list-style-type: none"> • Monodirectional transmitters: press and hold any key of the transmitter for at least 3 seconds to be memorized. • Bidirectional transmitters: press any key of the transmitter to be memorized. 	MONO: BIDI:
4.	If the memorisation procedure is successful, the LED emits 3 red flashes.	
5.	Repeat steps 3 and 4 to acquire all the remotes.	
6.	If the device doesn't receive any signal for 10 seconds, the programming procedure ends automatically.	








5.3 - Mode II

In Mode II each key of the transmitter can be associated with one of 10 possible commands (Table A6). For example, one automation can be controlled with just one key memorised for the Step-by-step command, while the other keys are left free to control other automations. In Mode II one memorisation phase is performed for each key and each occupies one location in the memory. During Mode II memorisation the key which is pressed is memorised. If another key is to be assigned a command on the same transmitter, a new memorisation phase needs to be performed for that specific key.

⚠ CAUTION! – For the partial positions to work correctly, you need to perform the calibration procedure (see chapter 6.1).

Table A6 - BiDi-Shutter - Memorisation in Mode II	
N°	Command
1	Step-by-step (Up-Stop-Down-Stop...)
2	Go to position level 5%
3	Go to position level 25%
4	Go to position level 50%
5	Go to position level 75%
6	Up
7	Down
8	Stop
9	“Hold-to-run” Down*
10	“Hold-to-run” Up*

* “Hold-to-run” command isn't available in some transmitters.





Table A7 - BiDi-Shutter - Memorising first and other transmitters in Mode II		
N°	Description	Example
1.	Press and hold the programming pushbutton (Figure 1).	
2.	Release the programming pushbutton (Figure 1) when the LED glows with orange (2 nd position).	
3.	Press the programming pushbutton (Figure 1) the number of times required for the particular command: 1 = Step-by-Step, 2 = go to position level 5%, 3 = go to position level 25%, 4 = go to position level 50%, 5 = go to position level 75%, 6 = Up, 7 = Down, 8 = Stop, 9 = Hold-to-run Down, 10 = Hold-to-run Up.	
4.	Check that the LED emits the number of long orange flashes corresponding to the required command.	1-10 
5.	Within 10 seconds: <ul style="list-style-type: none"> • Monodirectional transmitters: press and hold any key of the transmitter for at least 3 seconds to be memorized. • Bidirectional transmitters: press any key of the transmitter to be memorized. 	MONO:  BIDI: 
6.	If the memorisation procedure is successful, the LED emits 3 orange flashes.	
7.	Repeat steps 5 and 6 to acquire all the remotes with the same command.	
8.	Repeat steps 3 to 6 to acquire all the remotes with another command.	
9.	If the device doesn't receive any signal for 10 seconds, the programming procedure ends automatically.	

Note.
 If the memory is full (30 transmitters memorised) 6 red flashes are emitted and the transmitter can't be memorised.

5.4 - Memorising a new transmitter using the enabling code of an already memorised transmitter

The bidirectional transmitter has an enabling code. By transferring this code from a memorized transmitter to a new transmitter, the latter is recognized and memorized automatically by the control unit. Please refer to the manual of the transmitters for further details.

⚠ CAUTION! – The enabling code can only be transferred between two transmitters that have the same radio coding.

Table A8 - Mono and bi-directional transmitters - transmitting an enabling code		
N°	Description	Example
1.	Put a previously memorised transmitter close to a new one.	
2.	On the new transmitter press the command key. The LED of the previously memorised transmitter switches on and starts flashing.	New:  Old: 
3.	Press command key on the previously memorised transmitter.	Old: 
4.	When the code is transferred, for an instant both transmitters vibrate and the green LED glows signalling end of the procedure. When the new transmitter is used for the first 20 times it transmits the enabling code to the receiver together with the command. The receiver memorizes automatically the identification code of the transmitter that sent it.	

6.1 - Calibration

During the calibration process the device learns the position of the Up and Down limit positions. The calibration can be performed automatically or manually.

During the automatic calibration the motor performs the Up, Down and Up movements to recognize the limit positions.





During the manual calibration limit positions need to be saved manually while the motor performs the Up and Down movements.

⚠ CAUTION! – If the automatic calibration didn't recognize properly the limit positions, perform the manual calibration instead.










⚠ CAUTION! – Before the calibration, set the shutter to the middle position.

⚠ CAUTION! – There is a fixed operation time of 240 s when module isn't calibrated.

To perform automatic calibration, follow the steps from the table below:

Tabel A9 - BiDi-Shutter - Automatic calibration		
N°	Description	Example
1.	Press and hold the programming pushbutton (Figure 1).	
2.	Release the programming pushbutton (Figure 1) when the LED glows with blue (3 rd position).	
3.	Press the ■ key (or the second channel) of the transmitter.	
4.	The motor completes Up, Down and Up movements automatically.	
5.	The programming procedure ends automatically after finishing 2 complete movements.	

To perform the calibration manually, follow the steps from the table below. Perform manual calibration only when automatic doesn't work.

Table A10 - BiDi-Shutter - Manual calibration		
N°	Description	Example
1.	Press and hold the programming pushbutton (Figure 1).	
2.	Release the programming pushbutton (Figure 1) when the LED glows with blue (3 rd position).	
3.	Press the ▲ key (or the first channel) of the transmitter to start calibration.	
4.	Device will start the Up movement.	
5.	Press the ■ key (or the second channel) of the transmitter to set the Up limit position.	
6.	Device will start the Down movement.	
7.	Press the ■ key (or the second channel) of the transmitter to set the Down limit position.	
8.	Device will start the Up movement.	
9.	Press the ■ key (or the second channel) of the transmitter to set the Up limit position.	
10.	The programming procedure ends automatically.	

6.2 - Partial positions

The BiDi-Shutter control unit enables setting the quick-access partial positions. The partial positions only work with transmitters memorised in mode I.

Table A11 - BiDi-Shutter - Available partial positions		
N°	Press at the same time to activate	Default position
1.	the ▲ and ▼ keys the 1 st and the 3 rd channels S1 and S2	50% of the working time
2.	the ▲ and ■ keys the 1 st and the 2 nd channels	15% of the working time



- If the Venetian blind mode is activated (see chapter 6.5), the Venetian blinds stop at 15% and the slats are rotated by 10% by default (the 2nd partial position changes operation).
- If the Venetian blinds mode is disabled, the shutter stops at 15% (the 2nd partial position) by default.
- The partial positions work if the calibration was performed.
- Pressing S1 and S2 at the same time might not be possible for some types of pushbuttons/switches.

To set a new position for the 1st partial position, follow the steps from the table below:




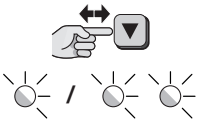

Table A12 - BiDi-Shutter - Setting the 1 st partial position		
N°	Description	Example
1.	Press and hold the programming pushbutton (Figure 1).	
2.	Release the programming pushbutton (Figure 1) when the LED glows with white (5 th position).	
3.	Press the ▲ and ▼ keys or the 1 st and the 3 rd channels at the same time, the LED will confirm the action with one white flash.	
4.	Bring the shutter/blind/awning at your desired partial position (or press the ▲ and ▼ keys or the 1 st and the 3 rd channels at the same time to disable the 1 st partial position altogether).	
5.	Save and end the programming by pushing the programming pushbutton (Figure 1).	

To set a new position for the 2nd partial position, follow the steps from the table below:

Table A13 - BiDi-Shutter - Setting the 2 nd partial position		
N°	Description	Example
1.	Press and hold the programming pushbutton (Figure 1).	
2.	Release the programming pushbutton (Figure 1) when the LED glows with white (5 th position).	
3.	Press the ▲ and ■ keys or the 1 st and the 2 nd channels at the same time, the LED will confirm the action with two white flashes.	
4.	Bring the shutter/blind/awning at your desired partial position (or press ▲ and ■ or the 1 st and the 2 nd channel at the same time to disable the 2 nd partial position altogether).	
5.	Save and end the programming by pushing the programming pushbutton (Figure 1).	

6.3 - Virtual Limit Switch

If needed, you can set a virtual limit switch and limit the shutter/blind/awning movement to the specified position (range).

Table A14 - BiDi-Shutter - Setting a virtual limit switch		
N°	Description	Example
1.	Bring the shutter/awning to your desired position (virtual limit switch).	
2.	Press and hold the programming pushbutton (Figure 1).	
3.	Release the programming pushbutton (Figure 1) when the LED glows with blue (3 rd position).	
4.	Press the ▼ key (or the 3 rd channel) of the transmitter: <ul style="list-style-type: none"> • If the LED confirms with one blue flash, the procedure is active, • If the LED confirms with two blue flashes, the procedure is canceled because the roller shutter wasn't calibrated before. 	
5.	Press the key of the transmitter to select a mechanical limit switch: <ul style="list-style-type: none"> • the ▲ key or the 1st channel – the top limit switch. • the ▼ key or the 3rd channel – the bottom limit switch. 	
6.	The motor makes a move between the virtual and mechanical limit switch.	
7.	The programming procedure ends automatically.	

6.4 - Wired pushbutton programming

The pushbuttons connected to the S1 (Up) and S2 (Down) inputs can be programmed in different ways:





- **Go to the limit position** – press the pushbutton to move the motor to the programmed limit position,
- **Hold to run** – press and hold the pushbutton to move the motor, then release it to stop the motor at the desired position.

If the wired pushbuttons are programmed as **Go to the limit position**, you can choose how the motor is stopped:

- Pressing both pushbuttons together,
- Pressing the pushbutton for the same direction that the shutter/awning moves,
- Pressing the pushbutton for the opposite direction that the shutter/awning moves.

By default, the motor stops when you press the pushbutton for the opposite direction.

To select the stopping action, follow the steps from the table below:

Table A15 - BiDi-Shutter - Setting wired pushbutton		
N°	Description	Example
1.	Press and hold the programming pushbutton (Figure 1).	
2.	Release the programming pushbutton (Figure 1) when the LED glows with violet (6 th position).	
3.	Press the programming pushbutton (Figure 1) the number of times required for the particular command: <ul style="list-style-type: none"> 1 = press both pushbuttons together to stop the motor*, 2 = press the pushbutton for the same direction to stop the motor, 3 = press the pushbutton for the opposite direction to stop the motor, 4 = pushbuttons work as Hold to run. 	
4.	Check that the LED emits the number of violet flashes corresponding to the required command.	
5.	The programming procedure ends automatically.	

* If the 1st partial position is already programmed, pressing the S1 and S2 keys together can't be used for stopping. Pressing S1 and S2 at the same time might not be possible for some types of pushbuttons/switches.






6.5 - Venetian blind and Awning Mode

The BiDi-Shutter control unit enables the control of slats for Venetian blinds. When the Venetian blinds control is enabled, pressing the ▲ key / S1 or the ▼ / S2 will move the slats by 20%. The normal Up and Down movement needs to be performed by pressing and holding the corresponding keys. Time of full slats movement needs to be adjusted for the function to work properly. By default, the Venetian blinds function is disabled and the full movement time is set to 1.5s.

Note.

When the Awning Mode control is enabled, it represents behaviour of BiDi Awning – especially the reactions to Climatic Sensor alarms.

To enable or disable the Venetian blinds control and set the slats movement time, follow the steps from the table below:

Table A16 - BiDi-Shutter - Setting Venetian blinds and Awning Mode behavior		
N°	Description	Example
1.	Press and hold the programming pushbutton (Figure 1).	
2.	Release the programming pushbutton (Figure 1) when the LED glows with cyan (7 th position - setting up the Venetian Blinds Mode).	
3.	Press the ▲ key (or the 1 st channel) of the transmitter to toggle the setting. The LED informs about the current setting: <ul style="list-style-type: none"> • Fixed green – Awning Mode control enabled • Fixed cyan – Venetian blinds control enabled • Turned off – BiDi-Shutter default mode enabled 	
4.	Only for Venetian Behaviour Press the pushbutton the number of times corresponding to the required time (1 = 250 ms, 2 = 500 ms, 3 = 750 ms, 4 = 1 s, 5 = 1.25 s, 6 = 1.5 s, 7 = 1.75 s, 8 = 2 s, 9 = 2.25 s, 10 = 2.5 s, 11 = 2.75 s, 12 = 3 s).	1-12 
5.	Check that the LED emits the number of cyan flashes corresponding to the required time.	1-12 
6.	If the device doesn't receive any signal for 10 seconds, the programming procedure ends automatically.	

6.6 - Climatic sensors

The control unit supports Nice radio mono and bidirectional climatic sensors. Memorisation of a climatic sensor must be carried out like that of a normal transmitter (follow the procedure in table A5). Thresholds for commands must be programmed on the climatic sensor.

Commands connected to wind are given priority, followed by the sun and rain commands. Please refer to the manual of the climatic sensor for further details.

Reactions to the sun or rain can be turned activated/deactivated using the Sun ON/OFF button (by default the reactions are activated).

Note.

60 minutes timeout of alarm condition is set when the climatic sensor is missing

Note.

Disable alarm condition - Within 60 seconds, movement attempt is performed twice.

4 small movements are visible and the motor is unlocked.

Table A17 - BiDi-Shutter - Shutter, Awning and Venetian Blinds Mode - Wind / No wind				
N°	Wind status	Shutter Mode	Awning mode	Venetian Blinds Mode
1.	WIND	Up (default) / Down	Up & Lock	Up + Lock
2.	NO WIND	No activity	Unlock	Unlock

Note.

Wind ON Override - emergency override of the wind blockade (if the climate sensor is not available) - small movements indicate the LOCK status, a new movement within 1 minute deactivates the LOCK status.


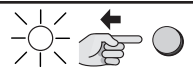


Wind Timeout - deactivation after a certain time of sensor inactivity - (in MONO protocol only) - after 1 hour from the last WIND trigger. The device exits the WIND status without receiving the NO WIND status from the climate sensor as well.

Table A18 - BiDi-Shutter - Shutter, Awning and Venetian Blinds Mode - Sun / No sun				
N°	Sun status	Shutter Mode	Awning mode	Venetian Blinds Mode
1.	SUN	PARTIAL POSITION (if set)	Down	Partial position
2.	NO SUN	No activity	Up	No activity

Note.





Sun Override Condition - override of the SUN command when the actuator is in the SUN status (after a sensor event) - if the user presses Up (the blinds go up), subsequent SUN events are ignored until the next day - for MONO and BIDI.

Table A19 - BiDi-Shutter - Shutter, Awning and Venetian Blinds Mode - Rain / No rain				
N°	Rain status	Shutter Mode	Awning mode	Venetian Blinds Mode
1.	RAIN	Down	Up (fixed)	Down
2.	NO RAIN	No activity	No activity	No activity

Table A20 - BiDi-Shutter - Setting response to the Wind ON command		
N°	Description	Example
1.	Press and hold the programming pushbutton (Figure 1).	
2.	Release the programming pushbutton (Figure 1) when the LED glows with green (the 4 th position).	
3.	Press the key of the transmitter to select a response to the Wind ON command: <ul style="list-style-type: none"> the ▲ key or the 1st channel - go to the Up position (default). the ▼ key or the 3rd channel - go to the Down position. 	
4.	Currently set response to the Wind ON command is confirmed with LED flashes: <ul style="list-style-type: none"> LED emits 2 green flashes - go to the Down position. LED emits 4 green flashes - go to the Up position. 	2/4 
5.	If the device doesn't receive any signal for 10 seconds, the programming procedure ends automatically.	





6.7 - Deleting transmitters

If memorised transmitters and settings need to be deleted, follow the steps from the table below:

Table A21 - BiDi-Shutter - Deleting individual transmitters from the memory		
N°	Description	Example
1.	Press and hold the programming pushbutton (Figure 1).	
2.	Release the programming pushbutton (Figure 1) when the LED glows with yellow (8 th position).	
3.	Press any key on the acquired transmitter to remove it from memory.	
4.	LED emits 3 yellow flashes to confirm the correct removal.	
5.	If the device doesn't receive any signal for 10 seconds, the programming procedure ends automatically.	

6.8 - Factory reset

If the control unit needs to be reset to the factory settings (all transmitters and setting are deleted), follow the steps from the table below:

Table A22 - BiDi-Shutter - Restoring to factory defaults		
N°	Description	Example
1.	Press and hold the programming pushbutton (Figure 1).	
2.	Release the programming pushbutton (Figure 1) when the LED glows with yellow (8 th position).	
3.	Press the programming pushbutton (Figure 1).	
4.	LED emits 5 yellow flashes to confirm the correct reset.	
5.	The programming procedure ends automatically. Afterwards, the control unit initiates the start-up procedure according to table A4.	

7 LED SIGNALS

7.1 - Programming menu

When pressing and holding the programming pushbutton on the control unit, the LED signals consecutive positions of the programming menu.

N°	Color	Description
1	Red	Memorization in Mode I
2	Orange	Memorization in Mode II
3	Blue	Calibration
4	Green	Response to Wind ON command (see Table A20)
5	White	Partial position settings
6	Violet	Stopping with pushbuttons settings
7	Cyan	Venetian blinds and Awning mode
8	Yellow	Reset

7.2 - Other signals

Color	Description
2 red flashes	Control unit initialized properly
3 red flashes	Transmitter memorized in Mode I
3 orange flashes	Transmitter memorized in Mode II
6 red flashes	Memory for transmitters full (Mode I)
6 orange flashes	Memory for transmitters full (Mode II)
3 yellow flashes	Transmitter deleted from memory
5 yellow flashes	Control unit restored to factory settings

8 PRODUCT DISPOSAL

This product is an integral part of the automation and therefore must be disposed together with the latter.
At the end of the product lifetime, the disassembly and scrapping operations must be performed by qualified personnel.
This product is made of various types of material, some of which can be recycled while others must be scrapped. Seek information on the recycling and disposal systems envisaged by the local regulations in your area for this product category.

⚠ CAUTION! – Some parts of the product may contain pollutant or hazardous substances which, if disposed of into the environment, may cause serious damage to the environment or physical health.

⚠ CAUTION! – As indicated by the symbol alongside, disposal of this product in domestic waste is strictly prohibited. Separate the waste into categories for disposal, according to the methods envisaged by current legislation in your area, or return the product to the retailer when purchasing a new version.



⚠ CAUTION! – Local legislation may envisage serious fines in the event of abusive disposal of this product.

9 DECLARATION OF CONFORMITY

Nice S.p.A. declares that the radio equipment type BiDi-Shutter complies with Directive 2014/53/EU.
The full text of the EU Declaration of Conformity is available at: <http://www.niceforyou.com/en/support>



Nice S.p.A.
Oderzo TV Italia
info@niceforyou.com

www.niceforyou.com